



# MIRR

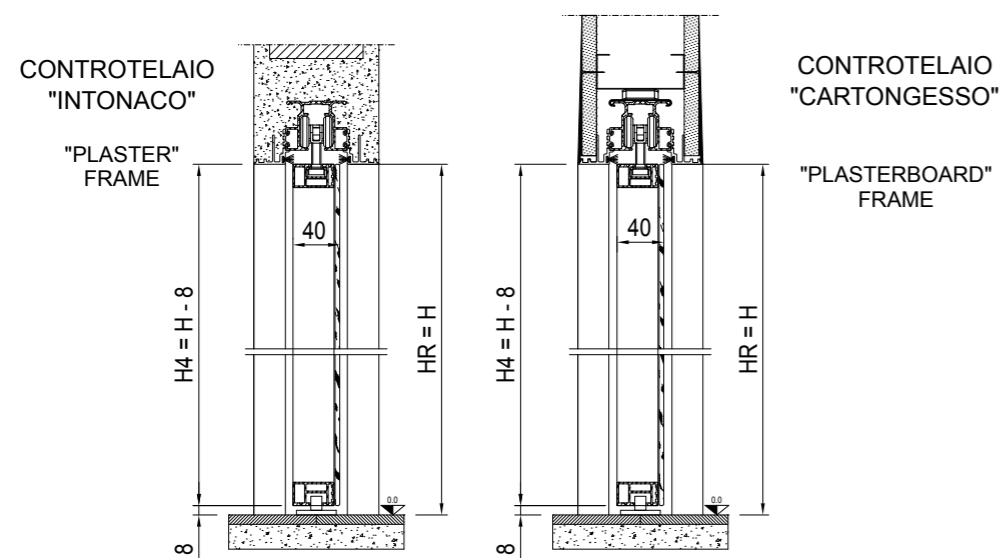



Prima di ordinare la porta è necessario verificare in cantiere l'effettiva misura della luce di passaggio.  
Before ordering the door, the effective clear opening size must be checked onsite.

**! ANTA UNICA**  
LUCE DI PASSAGGIO REALE = LUCE NOMINALE - 10 mm  
SINGLE DOOR  
ACTUAL OPENING WIDTH = NOMINAL OPENING WIDTH - 10 mm

ANTA UNICA "INTONACO"  
"PLASTER" SINGLE DOOR

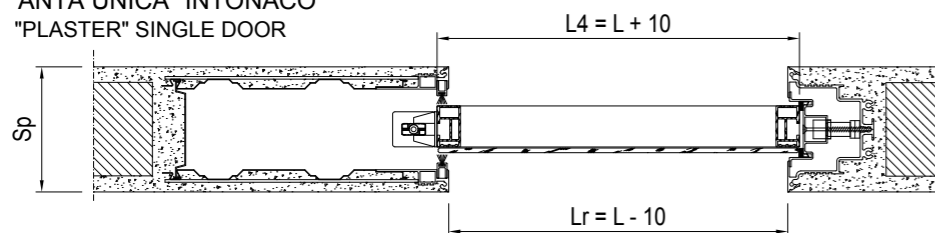


ANTA UNICA "CARTONGESSO"  
"PLASTERBOARD" SINGLE DOOR

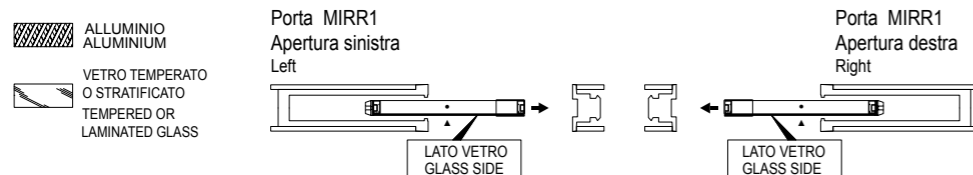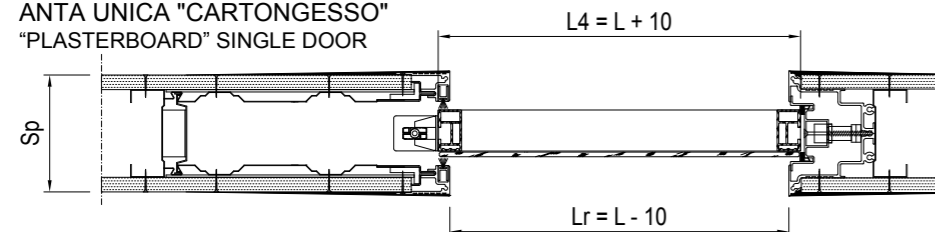


LUCE DI PASSAGGIO CLEAR OPENING SIZE		LUCE REALE EFFECTIVE OPENING DIMENSIONS		MISURA ANTA DOOR MEASUREMENT		SPESORE PARETE FINISHED WALL
L	H	LR	HR	L4	H4	Sp
600 ÷ 1200	1800 ÷ 2700	590 ÷ 1190	1800 ÷ 2700	610 ÷ 1210	1792 ÷ 2692	<b>Intonaco</b> Plaster 105 - 125 - 145 <b>Cartongesso</b> Plasterboard 100 - 125 - 125 L2 - 150L2

# MIRR

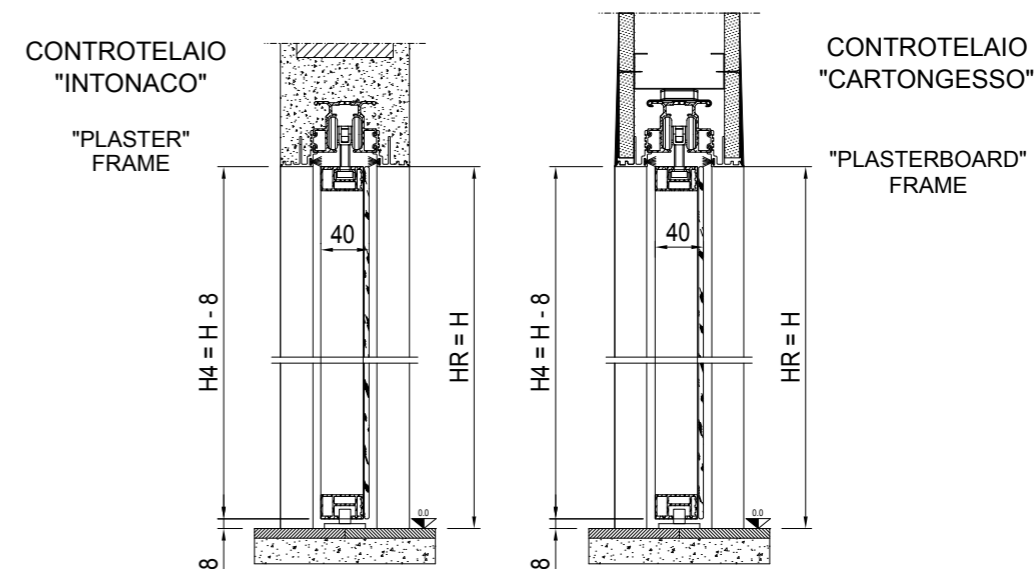


Prima di ordinare la porta è necessario verificare in cantiere l'effettiva misura della luce di passaggio.  
Before ordering the door, the effective clear opening size must be checked onsite.

ANTA UNICA "INTONACO"  
"PLASTER" SINGLE DOOR

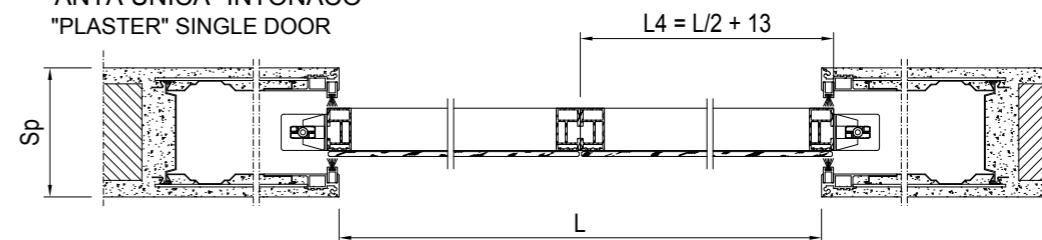

ANTA UNICA "CARTONGESSO"  
"PLASTERBOARD" SINGLE DOOR

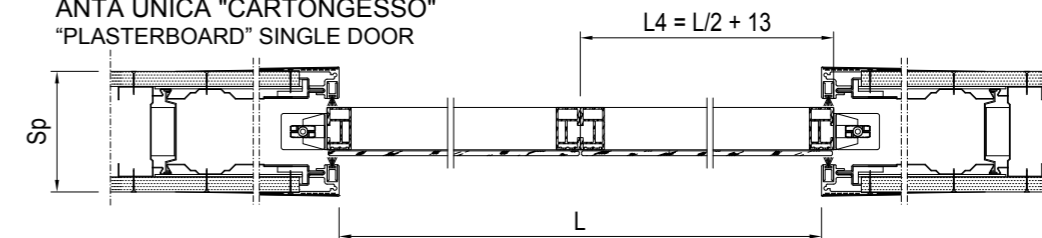

LUCE DI PASSAGGIO CLEAR OPENING SIZE		LUCE REALE EFFECTIVE OPENING DIMENSIONS		MISURA ANTA DOOR MEASUREMENT		SPESORE PARETE FINISHED WALL
L	H	LR	HR	L4	H4	Sp
1200 ÷ 2400	1800 ÷ 2700	1200 ÷ 2400	1800 ÷ 2700	613 ÷ 1213	1792 ÷ 2692	<b>Intonaco</b> Plaster 105 - 125 - 145 <b>Cartongesso</b> Plasterboard 100 - 125 - 125 L2 - 150L2